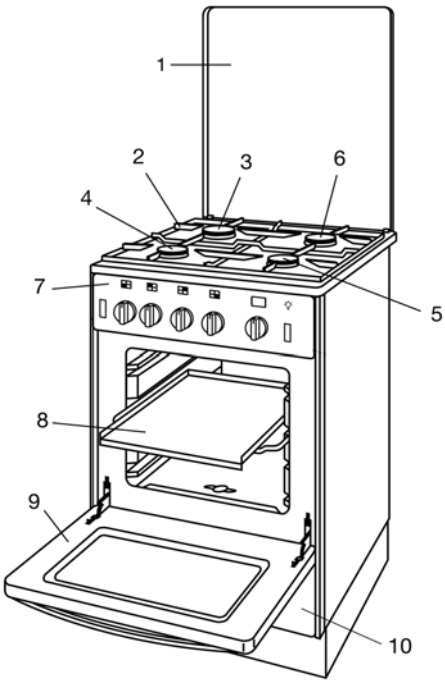

COOKING ZONE

1. Enamelled Lid
2. Enamelled pan support
3. Rear left burner - Rapid
4. Front left burner - Small
5. Front right burner - Normal
6. Rear right burner - Normal
7. Control panel

OVEN

8. ACCESSORIES:
   - Baking tray
   - Grill pan set + handle
   - Shelves
   - Protection sheet
9. Oven door
10. Fixed panel

ADDITIONAL FEATURES
Gas oven safety device
Oven light
Adjustable feet

DIMENSIONS (cm) **(WxDxH)** 50 x 60 x 91

CONTROL PANEL

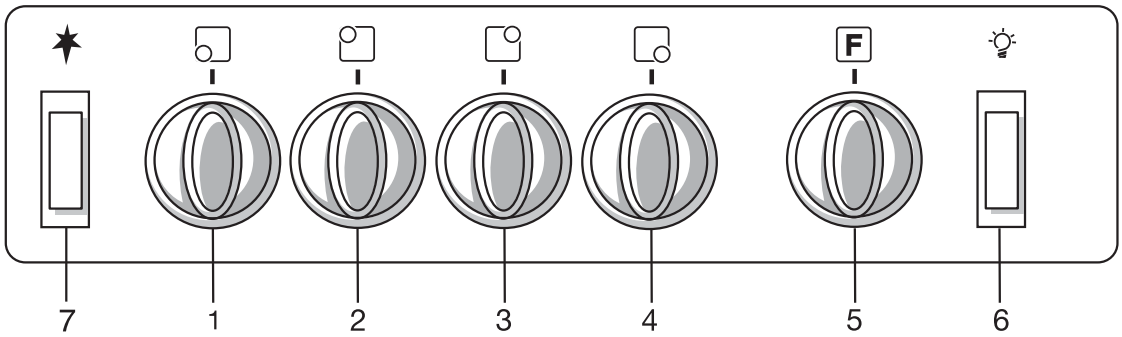

1. Front left control knob
2. Rear left control knob
3. Rear right control knob
4. Front right control knob
5. Thermostat control knob
6. Oven light
7. Ignition

Indicative correspondence of numbers on thermostat control knob with °C:

1 - 2	150 - 175°C
3 - 4	200 - 225°C
5 - 6	245 - 265°C
7 - 8	280 - 290°C

WARNING!
In the event of abnormal oven temperature deviations a qualified repairer should be called out to deal with the thermostat.